

BOSE

LIFESTYLE ULTRA SPEAKER

Please read and keep all safety and use instructions.

Declarations of conformity can be found at: www.Bose.com/compliance



Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and all other applicable EU directive requirements.

Important Safety Instructions

Do not use this apparatus near water.

Clean only with a dry cloth.

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Only use attachments/accessories specified by the manufacturer.

Refer all servicing to qualified personnel. Servicing is required when the apparatus does not operate normally, or has been physically damaged.

WARNINGS/CAUTIONS

- To reduce the risk of fire or electrical shock do NOT expose this product to rain, dripping, splashing, or moisture and do not place liquid filled objects such as vases, on or near the product.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Do NOT make unauthorized alterations to this product.
- Do NOT use in vehicles or boats.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



仅适用于 2000m 以下地区安全使用

Use at altitude less than 2000 meters only.

- Only use the following hardware to mount this product: Bose Lifestyle Wall Bracket and Bose Lifestyle Floor Stand.
- Do not place or install near any heat sources, such as fireplaces, radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not mount the product in locations where condensation may occur.
- Product is not intended for use by children.
- The product label is located on the bottom of the product.

WARNING: Do not expose product or mounting components to any chemical substances that are not specified by Bose, including but not limited to lubricants, cleaning agents, contact sprays, or hydrocarbon based solvents. Exposure to such substances can lead to degradation of the plastic material, resulting in cracking and creating a falling hazard.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving product or antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules and with ISED Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with a minimum distance of 20 cm between radiator and your body.

This device for operation in the 5150 - 5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

FCC regulations restrict the operation of this device to indoor use only.

This device is prohibited from being operated on oil platforms, cars, trains, boats, and aircraft, except it can be operated in large aircraft while flying above 10,000 feet in the 5.925 - 6.425 GHz band.


Transmitters in the 5.925 - 7.125 GHz band are prohibited from operating to control or communicate with unmanned aircraft systems.


FCC ID: A94443508

CAN ICES (B) / NMB (B)

For Europe: Frequency bands of operation 2400 to 2483.5 MHz, 5150 to 5350 MHz, and 5470 to 5725 MHz. Maximum transmit power less than 20 dBm EIRP. | Frequency band of operation 5725 to 5850 MHz. Maximum transmit power less than 14 dBm (25mW) EIRP. | Frequency band of operation 5945 to 6425 MHz. Maximum transmit power less than 23 dBm EIRP.

This device is restricted to indoor use when operating in the 5150 to 5350 MHz frequency range in all EU Member States listed in the table.


									
BE	DK	IE	UK	FR	CY	SK	HU	AT	SE
BG	DE	PT	EL	HR	LV	LT	MT	PL	
CZ	EE	FI	ES	IT	RO	LU	NL	SI	

 This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

Low-power Radio-frequency Devices Technical Regulations: Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to a approved low power radio-frequency devices. The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications is operated in compliance with the Telecommunications Management Act. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

Power State Information: The product, in accordance with the Ecodesign Requirements for Energy Related Products Directive 2009/125/EC and the Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2020, is in compliance with Commission Regulation (EU) 2023/826. For information about power consumption for different standby modes and the period after which the product automatically reverts to those modes, visit www.Bose.com/compliance and select this regulation.



Names and Contents of Toxic or Hazardous Substances or Elements										
Toxic or Hazardous Substances and Elements										
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)	Dybutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)	Butyl benzyl phthalate (BBP)	Bis(2-ethylhexyl) phthalate (DEHP)
PCBs	X	O	O	O	O	O	O	O	O	O
Metal Parts	X	O	O	O	O	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O	O	O	O	O
Speakers	X	O	O	O	O	O	O	O	O	O
Cables	X	O	O	O	O	O	O	O	O	O
This table is prepared in accordance with the provisions of SJ/T 11364. O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572. X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.										

Restricted substances and its chemical symbols						
Unit	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr ⁺⁶)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCBs	-	O	O	O	O	O
Metal Parts	-	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O
Speakers	-	O	O	O	O	O
Cables	-	O	O	O	O	O
Note 1: "O" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. Note 2: The "-" indicates that the restricted substance corresponds to the exemption.						

Date of Manufacture: The eighth digit in the serial number indicates the year of manufacture; "6" is 2016 or 2026.

Importers: Bose Electronics (Shanghai) Company Limited, Level 6, Tower D, No. 2337 Gudai Rd. Minhang District, Shanghai 201100 | Bose Products B.V., Vijzelstraat 68, 1017HL Amsterdam, The Netherlands | Ingram Micro Mexico SA de CV, Joseillo 3 Int. Piso 5 Col. El Parque, Naucalpan de Juarez, Edo Mex 53398 Phone Number: +52 55 5263 6500 | Bose Limited (H.K.), 7F., No. 2, Sec. 3, Minsheng E. Road, Zhongshan Dist., Taipei City 104511, Phone Number: +886-2-2514 7676 | Bose Limited, 16 Dufour's Place, London W1F 7SP

Mexico Service Phone Number: 0800-266-0292

Input Rating: 100 - 240V ~, 50/60Hz, 20W

Model: 443508. The CMIIT ID is located on the bottom of the speaker.

This product is covered by a **Bose Limited Warranty**, available at worldwide.Bose.com/Warranty

License Disclosures: To view the license disclosures that apply to the third-party software packages included as components of the Bose Lifestyle Ultra Speaker, use the Bose app. You can access this information from the Settings menu.

Amazon, Alexa, Amazon Music, and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

Apple, AirPlay, the Apple logo, and Apple Music are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

Google, Android, Google Play, Google Cast, and other marks are trademarks of Google LLC.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Pandora is a trademark of Pandora Media, Inc. used with permission.

Spotify is a registered trademark of Spotify AB.

The Spotify Software is subject to third party licenses found here:

<https://www.spotify.com/connect/third-party-licenses>

Wi-Fi is a registered trademark of Wi-Fi Alliance[®].

Bose, the B logo, and Lifestyle are trademarks of Bose Corporation. | Bose Corporation Headquarters: 1-877-230-5639 | ©2026 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Please complete and retain for your records

The serial and model numbers are located on the bottom of the speaker and under the rubber foot.

Serial number: -----

Model number: 443508

Please keep your receipt with your owner's guide. Now is a good time to register your Bose product. You can easily do this by going to worldwide.Bose.com/ProductRegistration

WHAT'S IN THE CARTON

Contents 10

SPEAKER PLACEMENT

Recommendations 11
 Mount the speaker..... 12

CONNECT THE SPEAKER TO POWER 13

BOSE APP SETUP

Download the Bose app 14

SET UP THE SPEAKER

Set up a standalone speaker..... 15
 Set up your home theater..... 15
 Set up your stereo pair..... 15

POWER

Power on 16
 Network Standby..... 16
 Enter Network Standby (manually) 16
 Exit Network Standby 16

SPEAKER CONTROLS

Media playback 18
 Volume 19
 Voice assistant 20
 Adjust the audio..... 20

AMAZON ALEXA

Access Amazon Alexa..... 21

 Use your voice..... 21

 Use the product controls 22

VOICE CONTROL WITH GOOGLE ASSISTANT

Access Google Assistant..... 23

STREAM AUDIO WITH GOOGLE CAST™ 24

STREAM AUDIO WITH AIRPLAY

Stream audio from the Control Center..... 25

Stream audio from an app 25

SPOTIFY CONNECT™

 Main features 26

BLUETOOTH® CONNECTIONS

Connect a device 27

Disconnect a device 27

Reconnect a device..... 28

Connect an additional device..... 28

Clear the speaker device list 29

SPEAKER STATUS

Power status..... 30

Wi-Fi® status..... 30

Bluetooth status..... 31

Update and error status..... 31

Amazon Alexa status 32

 Microphone off light 33

WIRED CONNECTION

Connect an audio cable 34

Switch to a wired connection 35

WI-FI CONNECTION

Connect to a different Wi-Fi network 36

Disable/Enable Wi-Fi capability..... 37

BUILD A BOSE LIFESTYLE COLLECTION HOME THEATER SYSTEM

Benefits 38

Compatible products 38

DEFINE A BOSE LIFESTYLE COLLECTION STEREO PAIR

Benefits 39

Compatible products 39

CARE AND MAINTENANCE

Update the speaker 40

Clean the speaker 40

Replacement parts and accessories 41

Limited warranty..... 41

TROUBLESHOOTING

Try these solutions first..... 42

 
Additional solutions 42

Reset the speaker 43


Restore the speaker to factory settings 44

CONTENTS

Confirm that the following parts are included:

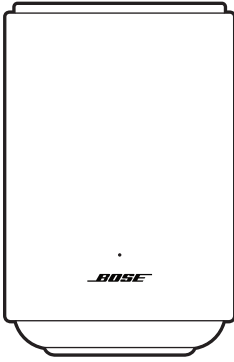

Bose Lifestyle Ultra Speaker

 

Power cord*

*May ship with multiple power cords. Use the power cord for your region.

NOTE: If any part of your product appears to be missing or damaged, don't use it. Visit support.bose.com/lu-speaker for troubleshooting articles, videos, and product repair or replacement.

RECOMMENDATIONS


For best performance, follow these recommendations when placing the speaker:

- Do NOT place the speaker on top of audio/video equipment (receivers, TVs, etc.), or any other object that may generate heat. Heat generated by these items may result in poor speaker performance.
- Do NOT place any objects on top of the speaker or in front of the speaker.
- To avoid interference, keep other wireless equipment 1 – 3 ft (0.3 – 0.9 m) away from the speaker. Place the speaker outside of and away from metal cabinets and direct heat sources.
- Place the speaker on a stable and level surface.
- Keep the back and sides of the speaker at least 2 – 3 in (5.08 – 7.62 cm) from any other surface or object. Blocking the port(s) affects sound quality.
- Make sure there is an AC (mains) power outlet nearby.

MOUNT THE SPEAKER

You can mount the speaker on a wall or attach it to a floor stand. To purchase the Bose Lifestyle Wall Bracket or Bose Lifestyle Floor Stand, contact your authorized Bose dealer.


Visit: support.Bose.com/lu-speaker

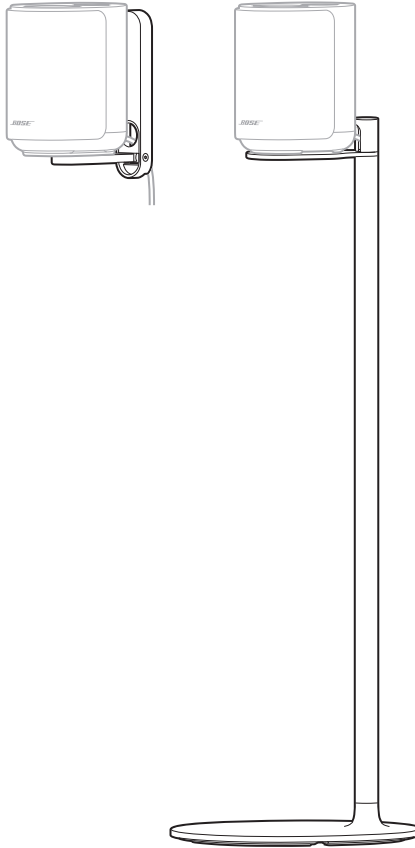

CAUTION: Do NOT use any other hardware to mount the speaker.

Connect the speaker to an AC (mains) power outlet using the power cord.

1. Connect the power cord to the power port on the speaker.
2. Plug the other end of the power cord into an AC (mains) power outlet.

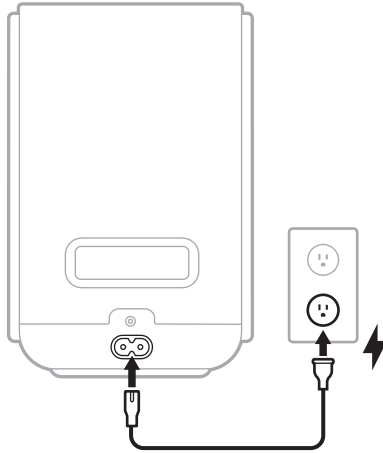

The speaker powers on. The status light slowly pulses white, blue, green, red, yellow, purple, and amber (repeated) and you hear a tone. The speaker is ready to be set up.

NOTE: The status light slowly pulses white, blue, green, red, yellow, purple, and amber (repeated) and you hear a tone only during initial product setup. If you're reconnecting the speaker to power, the status light slowly pulses white, then turns off. The speaker is fully powered on.

3. Set up the speaker using the Bose app (see page 14).

The Bose app lets you set up and control the speaker from a mobile device on the same Wi-Fi network, such as a smartphone or tablet.

Using the app, you can build a home theater system, define a stereo pair, configure Amazon Alexa, enable Google Cast, manage speaker settings, and learn about any updates and new features made available by Bose.

NOTE: If you've already downloaded the Bose app for another Bose product, open the app then add the speaker from the product list screen.

DOWNLOAD THE BOSE APP

1. On your device, download the Bose app.



setup.Bose.com/lu-speaker



2. Follow the app instructions to set up the speaker.

When you begin setup, the speaker status light glows solid green. When the speaker is connecting to your Wi-Fi network, the status light slowly pulses green.

NOTES:

- You can set up the speaker with other Bose Lifestyle Collection products to build a home theater system (see page 38). If you're connecting multiple Bose products at once, start with the soundbar for a more seamless setup.
- You can also set up the speaker as part of a stereo pair with another Bose Lifestyle Ultra Speaker (see page 39).

SET UP A STANDALONE SPEAKER

Getting started with your Bose Lifestyle Ultra Speaker is as easy as connecting your speaker to power (see page 13).

SET UP YOUR HOME THEATER

Immerse yourself in your favorite movies and TV shows by creating a surround sound experience for your home theater (see page 38).

You can build a Bose Lifestyle Collection home theater system using the following Bose products:

- Bose Lifestyle Ultra Soundbar
- Two Bose Lifestyle Ultra Speakers
- (Optional) Bose Lifestyle Ultra Subwoofer

NOTE: To set up a Bose Lifestyle Collection home theater system, use the Bose app (see page 14). If you are connecting multiple Bose products at once, start with the soundbar for easier setup.

SET UP YOUR STEREO PAIR

Place yourself in the middle of your music by defining the different channels (left and right) for multiple speakers (see page 39).

To set up a stereo pair, you need two Bose Lifestyle Ultra Speakers.

POWER ON



When you plug the speaker into an AC (mains) power outlet, the speaker automatically powers on. The status light slowly pulses white.


NETWORK STANDBY

The speaker transitions to a Network Standby state when audio has stopped and you have not pressed any buttons or talked to Amazon Alexa or your Google Assistant-enabled device for 20 minutes.

- To access Amazon Alexa in Network Standby, make sure the speaker has been set up using the Bose app (see page 14), Amazon Alexa has been configured on the product (see page 21), and the microphone is on (see page 32).
- When the speaker is in Network Standby, you can still use your voice to access your Google Assistant-enabled device to control the speaker (see page 23).
- You can disable the standby timer using the Bose app. You can access this option from the Settings menu.




Enter Network Standby (manually)

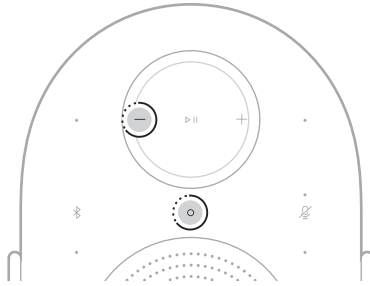To put the speaker into Network Standby manually, touch and hold the Action button  and Volume down button  for 5 seconds until the status light blinks white 2 times.




Exit Network Standby

To wake the speaker from Network Standby:




- Tap the *Bluetooth* button , the Action button , or the Play/Pause button .
- Play or resume audio using your device or using the Bose app (see page 14).
- Talk to Amazon Alexa (see page 21) or your Google Assistant-enabled device (see page 23).

The speaker controls are located on the top of the speaker. They are used to control the speaker, control the voice assistant, and manage Wi-Fi and *Bluetooth* connections.

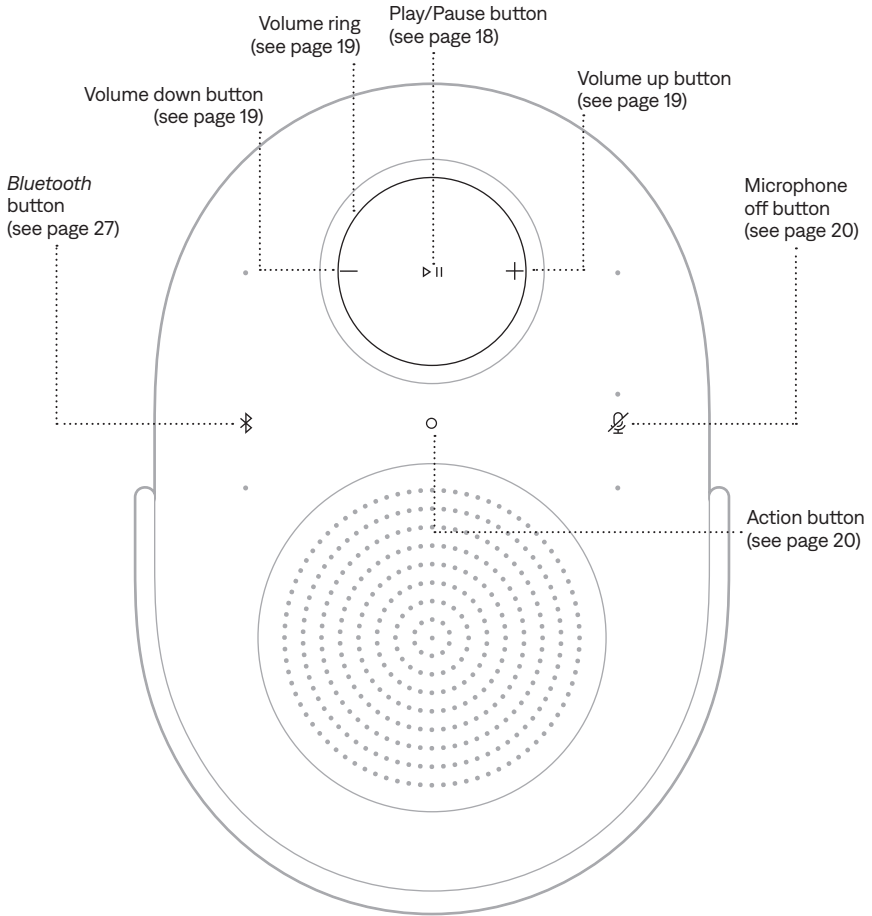





TIP: You can also control your speaker using the Bose app (see page 14).

MEDIA PLAYBACK

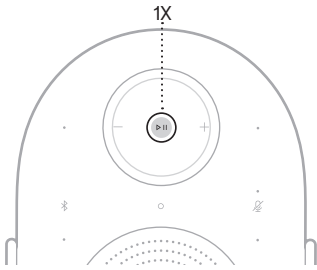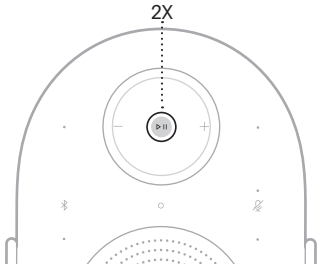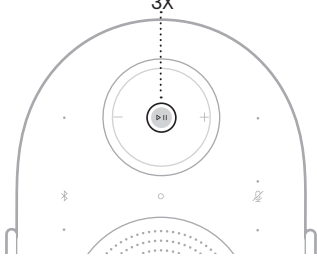FUNCTION	WHAT TO DO
Play/Pause	Tap ▷ . 
Skip forward	Double-tap ▷ . 
Skip backward	Triple-tap ▷ . 



NOTE: You can't play/pause, skip forward, or skip backward on an AUX source.

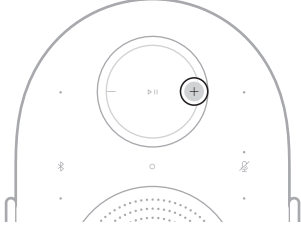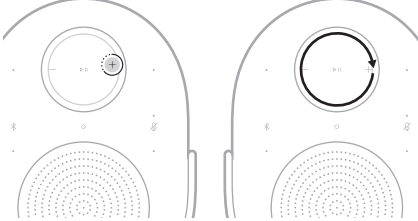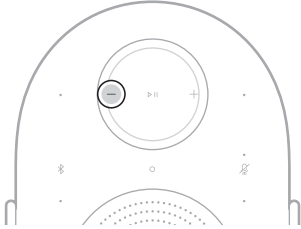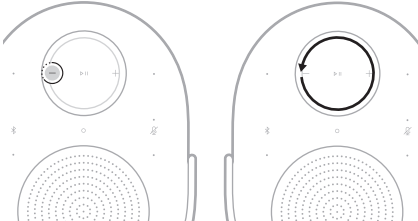
VOLUME

FUNCTION	WHAT TO DO
<p>Volume up</p>	<p>Tap +.</p> 
<p>Quickly increase the volume</p>	<p>Touch and hold + or swipe clockwise on the volume ring.</p> 
<p>Volume down</p>	<p>Tap -.</p> 
<p>Quickly decrease the volume</p>	<p>Touch and hold - or swipe counter-clockwise on the volume ring.</p> 

NOTE: When the volume has been fully increased or decreased, the status light blinks white 2 times and you hear a tone.

VOICE ASSISTANT

 You can use the Action button  to control Amazon Alexa (see page 22). Use the Microphone off button  to turn the microphone off (see page 22).

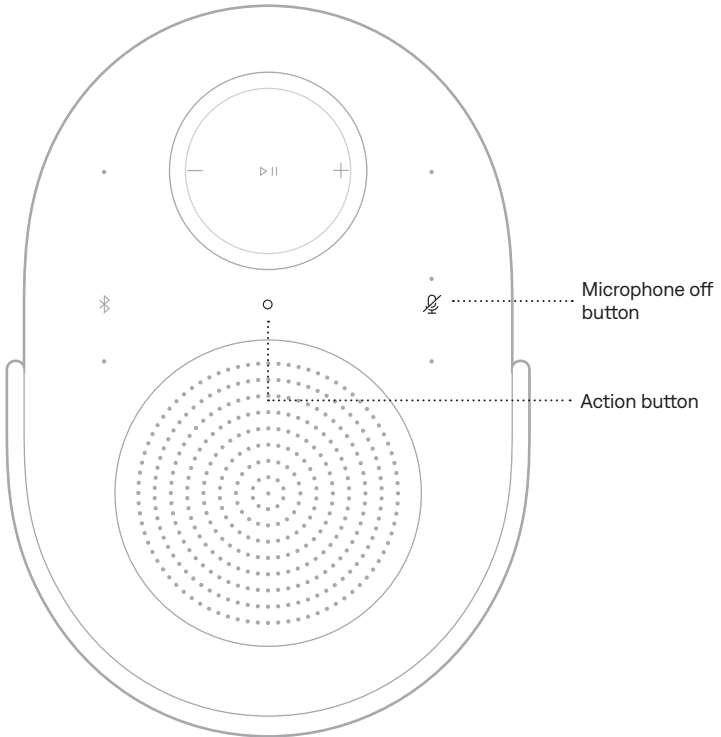

TIP: You can also use your voice to control Amazon Alexa (see page 21).

ADJUST THE AUDIO

To adjust the bass, treble, center channel, and height channel use the Bose app (see page 14). You can access these options from the product control screen.

ACCESS AMAZON ALEXA

With Alexa on your speaker, you can simplify your life and use your voice to control your music and much more. Using Alexa is as easy as asking a question. Just ask and Alexa can play your favorite song, skip to the next track, change the volume, read you the news and more. Alexa on your speaker makes it easier than ever to control your smart home, just by using your voice.

For more information about what Alexa can do, visit:
<https://www.amazon.com/usealexa>

To set up Amazon Alexa on the speaker, use the Bose app. You can access this option from the Settings menu.

NOTES:

- Alexa is not available in all languages and countries. Alexa features and functionality may vary by location.
- When setting up Alexa, make sure you use the same audio service account that you used in the Bose app.
- If you have multiple Bose products in your household, for a seamless voice assistant experience, Bose recommends one person use their Bose account and Amazon Alexa account to set up Alexa for all Bose products.



Use your voice





Start with “Alexa,” then say:



THINGS TO TRY	EXAMPLES OF WHAT TO SAY
Talk to Alexa	Help me get started.
Play audio	Play rock music. NOTE: Amazon Music is set as the default music service. To change the default music service, use the Alexa app.
Pause audio	Pause.
Control volume	Turn the volume up.
Skip to the next song	Skip this song.
Play from a specific audio service	Play NPR on Spotify. NOTE: Amazon Alexa doesn't support all audio services.

THINGS TO TRY	EXAMPLES OF WHAT TO SAY
Play on a specific speaker	Play jazz in the "Kitchen." NOTE: Make sure you say the speaker name you assigned in the Bose app. If multiple speakers have the same name, use the name assigned in the Alexa app or change the name in the Bose app.
Set a timer	Set a 2 minute plank timer.
Discover more skills	What are your skills?
Stop Alexa	Stop.

Use the product controls

You can use the Action button  to control Amazon Alexa. Use the Microphone off button  to turn the microphone off. They are located on the top of the speaker.

THINGS TO TRY	WHAT TO DO
Talk to Alexa	Tap  then say your request. For a list of things to try, visit: https://www.amazon.com/usealexa
Stop alarms and timers	Tap  .
Stop Alexa	Tap  .
Turn the microphone on/off	Tap  . NOTE: When the microphone is off, the Microphone off light glows solid red, and you can't access Alexa.

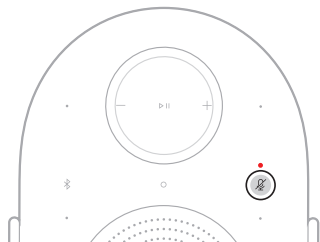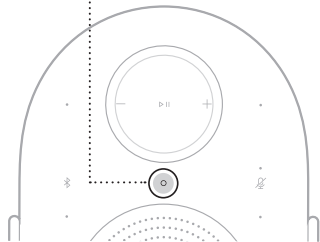  

ACCESS GOOGLE ASSISTANT

The speaker is compatible with a Google Assistant-enabled device connected to your network. Control the speaker using your voice. Just ask Google Assistant.

Start with saying “Hey Google,” then say your request on <speaker name>. For example, try playing your favorite music. Just say “Hey Google, play My Workout playlist on Family Room.”

NOTES:

- A Google Assistant-enabled device is required.
- Voice control is disabled by default. To set up voice control, use the Bose app to enable and set up Google Cast for your Google Assistant-enabled device. You can access these options from the Settings menu.
- Make sure you say the speaker name you assigned in the Bose app. If multiple speakers have the same name, use the name assigned in the Google Assistant app or change the name in the Bose app.
- Google Assistant isn't available in all languages and countries.
- For more information on what Google Assistant can do, visit: <https://support.google.com/assistant>

The speaker works with Google Cast. With Google Cast, you can stream audio from supported apps by simply tapping the Cast button.

NOTES:

- To use Google Cast, you must have a Wi-Fi connection.
- Google Cast is disabled by default. To enable Google Cast, use the Bose app. You can access this option from the Settings menu.
- Support for new apps is added periodically.

Your phone is your remote

- Simply tap the Cast button from apps you already know and love. No new logins or downloads required.
- Use your phone to search, play, pause, and turn up the volume from anywhere in the home.
- While you're streaming, you can keep using your phone for other things – scroll through social media, send a text, and even accept calls.
- Enjoy music throughout your house when you use multi-room casting with Cast-compatible speakers.

Unlimited entertainment, all on your schedule


- Works with hundreds of apps and new apps are being added all the time.
- Choose from millions of songs from popular music services like Pandora, Spotify, and YouTube Music.

The speaker is capable of playing AirPlay 2 audio, which allows you to quickly stream audio from your Apple device to this speaker or multiple other speakers.


NOTES:

- To use AirPlay 2, you need an Apple device running iOS 14.1 or later.
- Your Apple device and speaker must be connected to the same Wi-Fi network.
- For more information about AirPlay, visit: <https://www.apple.com/airplay>

STREAM AUDIO FROM THE CONTROL CENTER

1. On your Apple device, open the Control Center.
2. Tap and hold the audio card in the top-right corner of the screen, then tap the AirPlay icon .
3. Select your speaker.

STREAM AUDIO FROM AN APP

1. Open a music app (like Apple Music), and select a track to play.
2. Tap .
3. Select your speaker.

Spotify Connect is a better way to listen at home. Listen on your speaker, using the Spotify app as a remote. Enjoy the music together.

Main features

- Play together. Control the music from any mobile, tablet, or computer using the Spotify app.
- Bring the party. Ready made playlists for every mood and moment.
- Connect to better sound. Higher sample rates make the most of your music.


Use your phone, tablet, or computer as a remote control for Spotify.
Go to spotify.com/connect to learn how.

NOTE: The speaker and your device must be on the same Wi-Fi network and the Spotify app must be up to date. If using an Android device, make sure that the Nearby Devices permission is enabled for the Spotify app.

CONNECT A DEVICE

1. Tap the *Bluetooth* button .

The status light slowly pulses blue, and you hear a tone.

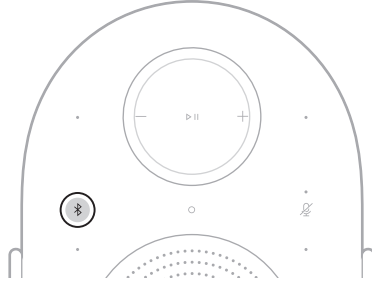

2. On your device, access *Bluetooth* settings.
3. Select your speaker from the list of available products.

NOTE: Look for the name you entered for your speaker in the Bose app. If you didn't name your speaker, the default name appears.



The speaker appears in the list of connected products. The status light glows solid blue for 5 seconds (see page 31), and you hear a tone.

NOTE: Make sure *Bluetooth* connection is enabled on your device.

DISCONNECT A DEVICE

Use the Bose app to disconnect your device.

TIP: You can also use *Bluetooth* settings on your device. Disabling the *Bluetooth* feature disconnects the speaker and all other *Bluetooth*-connected products.

RECONNECT A DEVICE

Tap the *Bluetooth* button .

The speaker tries to connect with the most recently-connected device.


NOTES:


- Make sure *Bluetooth* is enabled on your device.
- The device must be within 30 ft (9 m) and powered on.

CONNECT AN ADDITIONAL DEVICE

You can store up to eight devices in the speaker device list.

NOTE:


- Make sure *Bluetooth* is enabled on your device.
 - You can play audio from only one device at a time.
1. Touch and hold the *Bluetooth* button  for 5 seconds until the status light slowly pulses blue and you hear a tone.

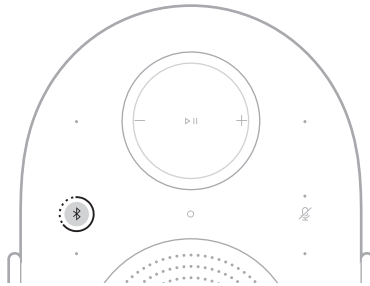


2. On your device, select the speaker from the available products.

The speaker appears in the list of connected products. The status light glows solid blue for 5 seconds (see page 31).

CLEAR THE SPEAKER DEVICE LIST


1. Touch and hold the *Bluetooth* button  for 10 seconds until the status light blinks white 2 times and you hear a tone.

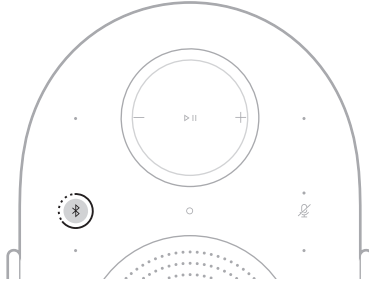

2. Delete the speaker from your device's *Bluetooth* settings.
All devices are cleared. The speaker is ready to connect (see page 27).

The status light is located on the front of the speaker and shows the speaker status.

NOTE: When the speaker successfully executes a command, the status light blinks white 2 times.

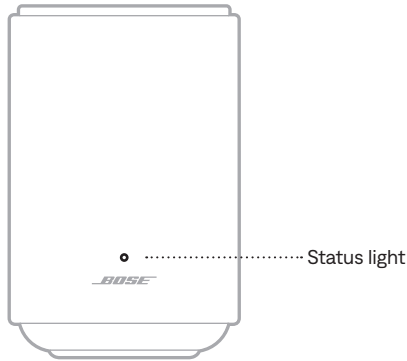

POWER STATUS

Shows the power status of the speaker.

STATUS LIGHT ACTIVITY	SYSTEM STATE
Slowly pulses white, blue, green, red, yellow, purple, and amber (repeated)	Powering on, ready for setup NOTE: Occurs only during initial product setup.
Slowly pulses white	Powering on

WI-FI STATUS

Shows the Wi-Fi connection status of the speaker.

STATUS LIGHT ACTIVITY	SYSTEM STATE
Solid green	Ready to connect to Wi-Fi network
Slowly pulses green	Connecting to Wi-Fi network

BLUETOOTH STATUS

Shows the *Bluetooth* connection status of devices.

STATUS LIGHT ACTIVITY	SYSTEM STATE
Slowly pulses blue	Ready to connect to device
Quickly blinks blue	Connecting to device
Solid blue (5 seconds)	Connected to device

UPDATE AND ERROR STATUS

Shows the status of software updates and error alerts.


STATUS LIGHT ACTIVITY	SYSTEM STATE
Slowly pulses white	Updating speaker
Slowly pulses amber	Restoring speaker
Quickly blinks amber	Wi-Fi connection lost
Quickly blinks white and amber (repeated)	Request is temporarily unavailable - try again later
Slowly pulses amber	Source error
Quickly blinks red	Error - contact Bose customer service

AMAZON ALEXA STATUS

Shows the status of Amazon Alexa.

STATUS LIGHT ACTIVITY	SYSTEM STATE
Off	Amazon Alexa is idle
Solid cyan	Amazon Alexa is listening
Quickly blinks blue and cyan	Amazon Alexa is thinking
Slowly pulses blue and cyan	Amazon Alexa is speaking
Pulses yellow	Notification or message from Amazon
Blinks blue 2 times, then blinks cyan 2 times	Alert (timer, alarm, or reminder) from Amazon Alexa
Quickly blinks green	Receiving call
Blinks green 4 times	Making call
Slowly pulses green	Connected to call NOTE: When the call is disconnected, the status light fades to black.
Blinks red 3 times	Error

Microphone off light

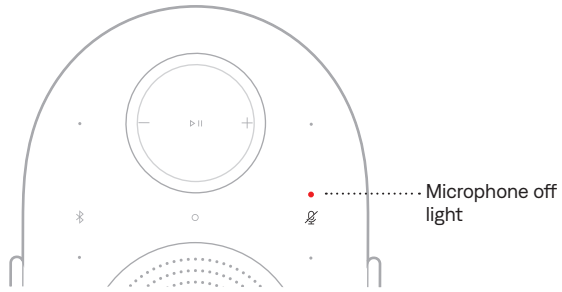

INDICATOR ACTIVITY

SYSTEM STATE


Solid red

Microphone is off

CONNECT AN AUDIO CABLE

You can connect a smartphone, tablet, computer, or other type of device to the speaker using a 3.5 mm audio cable (not provided).

1. Connect one end of the 3.5 mm audio cable (not provided) to the port on your device.
2. Connect the 3.5 mm end of the audio cable to the AUX port on the back of the speaker.

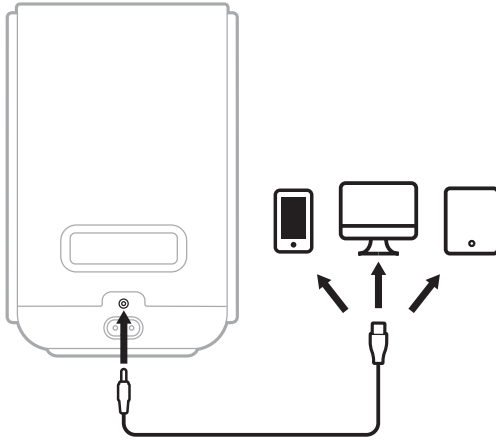


3. Touch and hold the Play/Pause button $\triangleright \parallel$ for 2 seconds to switch to your wired connection.

The status light blinks white 2 times, and you hear a tone.

SWITCH TO A WIRED CONNECTION

You can quickly and easily switch from a Wi-Fi-connected or *Bluetooth*-connected source to a wired connection using the AUX port.

1. Touch and hold the Play/Pause button ▷|| for 2 seconds until the status light blinks white 2 times and you hear a tone.

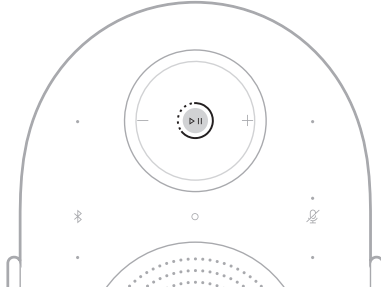




2. Play audio from your wired source.

NOTE: To switch back, touch and hold the Play/Pause button ▷|| for 2 seconds until the status light blinks white 2 times or stop audio on your wired source. Play audio from your Wi-Fi-connected or *Bluetooth*-connected source.


CONNECT TO A DIFFERENT WI-FI NETWORK

Connect to a different network if your network name or password has changed, or if you want to change or add another network.

1. Touch and hold the *Bluetooth* button  and Volume down button  for 5 seconds until the status light blinks white 2 times.

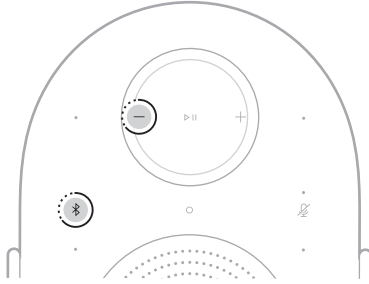

 The status light glows solid green. The soundbar is ready to connect to the new Wi-Fi network.

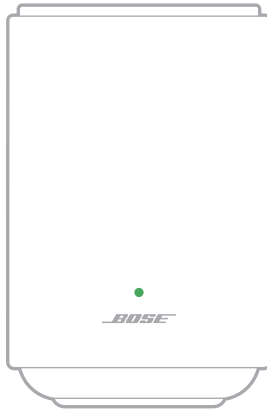


 
2. On your device, access your Wi-Fi settings.
3. Select **Bose LS Ultra Speaker**.


NOTE: Look for the name you entered for your speaker in the Bose app. If you didn't name your speaker, the default name appears.

4. Open the Bose app and follow the app instructions.

NOTE: If the app doesn't prompt you for setup, go to the product list screen and add the speaker.

DISABLE/ENABLE WI-FI CAPABILITY

Touch and hold the *Bluetooth* button  and Play/Pause button  for 5 seconds until the status light blinks white 2 times.

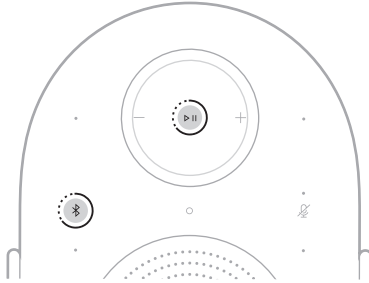

The Bose Lifestyle Collection of products have seamless integration designed to work together to create one aspirational and personal experience.

Building a home theater system creates a surround sound experience and immerses you in your favorite movies and TV shows. Use the Bose app to build a Bose Lifestyle Collection home theater system (see page 14).

BENEFITS

- **Audio quality:** Set the mood of the room or create a transformational experience with rich, powerful, and immersive sound.
- **Simplicity:** Access audio that easily integrates with your home decor.
- **Flexibility:** Take control with the flexibility to play what you want, how you want it, immediately.

COMPATIBLE PRODUCTS

You build a Bose Lifestyle Collection home theater system using the following products:

- Bose Lifestyle Ultra Soundbar: support.bose.com/lu-soundbar
- Two Bose Lifestyle Ultra Speakers: support.bose.com/lu-speaker
- (Optional) Bose Lifestyle Ultra Subwoofer: support.bose.com/lu-subwoofer

NOTES:

- All products must be in the Bose app and connected to the same Wi-Fi network.
- You can control the media playback and volume on the home theater system using the product controls, the Bose app, or your music service.
- When setting up a home theater system with a Bose Lifestyle Ultra Speaker, you must have two speakers to create a left and right pair.
- For more information about other Bose Lifestyle Collection products, refer to the product owner's guide for that product.

The Bose Lifestyle Collection of products have seamless integration designed to work together and elevate the listening experience.

Defining a stereo pair immerses you in your favorite songs and places you right in the crowd of a concert. Use the Bose app to define a stereo pair (see page 14).

BENEFITS

- **Audio quality:** Create a transformational experience with sound that moves around you from speaker to speaker.
- **Simplicity:** Access audio that easily integrates with your phone and other devices.
- **Flexibility:** Take control with the flexibility to play what you want, how you want it, immediately.

COMPATIBLE PRODUCTS

You build a Bose Lifestyle Collection stereo pair using two Bose Lifestyle Ultra Speakers.



Visit: support.bose.com/lu-speaker


NOTES:

- All products must be in the Bose app and connected to the same Wi-Fi network.
- You can control the media playback and volume on the stereo pair using the product controls, the Bose app, or your music service.
- When setting up a stereo pair, you must have two Bose Lifestyle Ultra Speakers to create a left and right pair.

UPDATE THE SPEAKER

After you complete the setup process in the Bose app and connect the speaker to your Wi-Fi network, the speaker updates automatically.

To initiate an update manually, touch and hold the Action button  and Play/Pause button  for 5 seconds until the status light blinks white 2 times.

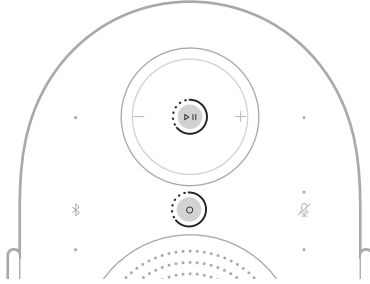

If an update is available, the software begins updating and the status light slowly pulses white. When the update is complete, the speaker reboots.

CLEAN THE SPEAKER

Wipe the outside surface of the speaker with a soft, dry cloth. To remove stains, use a soft, damp cloth.

NOTE: The speaker controls could be inadvertently activated during the cleaning procedure.

CAUTIONS:

- Do NOT allow liquids to spill onto the speaker or into any openings.
- Do NOT blow air into the speaker.
- Do NOT use any sprays near the speaker.
- Do NOT use any solvents, chemicals or cleaning solutions containing alcohol, ammonia or abrasives.
- Do NOT allow objects to drop into any openings.

REPLACEMENT PARTS AND ACCESSORIES

Replacement parts and accessories can be ordered through Bose customer service.

Visit: support.Bose.com/lu-speaker

LIMITED WARRANTY

The speaker is covered by a limited warranty. Visit our website at worldwide.Bose.com/Warranty for details of the limited warranty.

To register your product, visit worldwide.Bose.com/ProductRegistration for instructions. Failure to register will not affect your limited warranty rights.

TRY THESE SOLUTIONS FIRST

If you experience problems with the speaker, make sure that:

- The speaker is plugged firmly into a live AC (mains) power outlet (see page 16).
- All cables are secure.
- The correct source device is selected (see page 35).

If you experience problems connecting to your Wi-Fi network or *Bluetooth* device, see the table below to identify common solutions.

SYMPTOM	SOLUTION
Speaker doesn't connect to Wi-Fi network	<p>In the Bose app, select the correct network name, and enter the network password.</p> <p>Make sure the speaker and your device are connected to the same Wi-Fi network.</p> <p>If your network information has changed, see page 36.</p> <p>Enable Wi-Fi on the device you are using for setup.</p> <p>Close other open applications on your device.</p> <p>If your router supports both 2.4GHz and 5GHz bands, make sure both your device and the speaker are connecting to the same band.</p> <p>NOTE: Give each band a unique name to make sure you're connecting to the correct band.</p> <p>Reset the router.</p> <p>Uninstall the Bose app on your device. Unplug the power cord, wait 30 seconds and firmly plug it into the AC (mains) power outlet. Download the app and restart setup.</p>
Speaker doesn't connect with Bluetooth device	<p>On your device, turn the <i>Bluetooth</i> feature off and then on again. Remove the speaker from the <i>Bluetooth</i> menu. Connect again.</p> <p>Connect a different device (see page 27).</p> <p>Make sure you're using a compatible <i>Bluetooth</i> device.</p> <p>Remove the speaker from your device's <i>Bluetooth</i> device list and connect again (see page 28).</p> <p>Clear the speaker device list (see page 29).</p>

ADDITIONAL SOLUTIONS

If you could not resolve your issue, you can also access troubleshooting in the Bose app or view articles, videos, and other resources at: support.Bose.com/lu-speaker

If you are unable to resolve your issue, contact Bose customer service.

Visit: worldwide.Bose.com/contact


RESET THE SPEAKER

If the speaker is unresponsive, you can reset it.

NOTE: Resetting the speaker resets the product controls and reboots the speaker. It doesn't clear any device settings.

Do one of the following:

- Unplug the speaker from the AC (mains) power outlet, wait 30 seconds, then plug the speaker back into the outlet.
- Touch and hold the Play/Pause button ▶|| and the Volume up button + for 5 seconds until the status light blinks white 2 times.

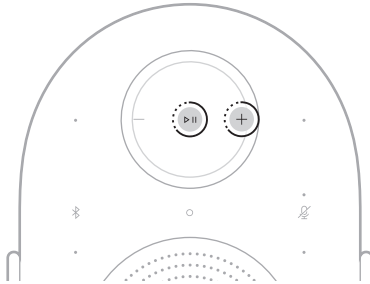



The reset is complete. The speaker powers on, and the status light slowly pulses white.


RESTORE THE SPEAKER TO FACTORY SETTINGS

Restoring the factory settings clears all source, audio, and network settings from the speaker and returns the speaker to its default settings.

NOTE: Restoring the speaker disconnects any Bose Lifestyle Collection products that are wirelessly connected to the speaker.

1. In the Bose app, remove the speaker from your Bose account.
2. Touch and hold the Play/Pause button  and the Volume down button  for 10 seconds until the status light slowly pulses amber.

NOTE: The status light glows solid white, then slowly pulses amber.

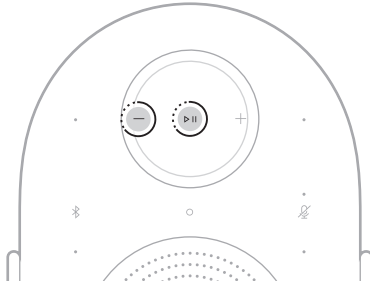

The restore is complete. The speaker reboots and is ready to connect.

3. Set up your speaker using the Bose app (see page 14).



896885-0010